


# Process Modeling Resources - Manual

Visual Components Essentials 4.3 | Version: February 18, 2021

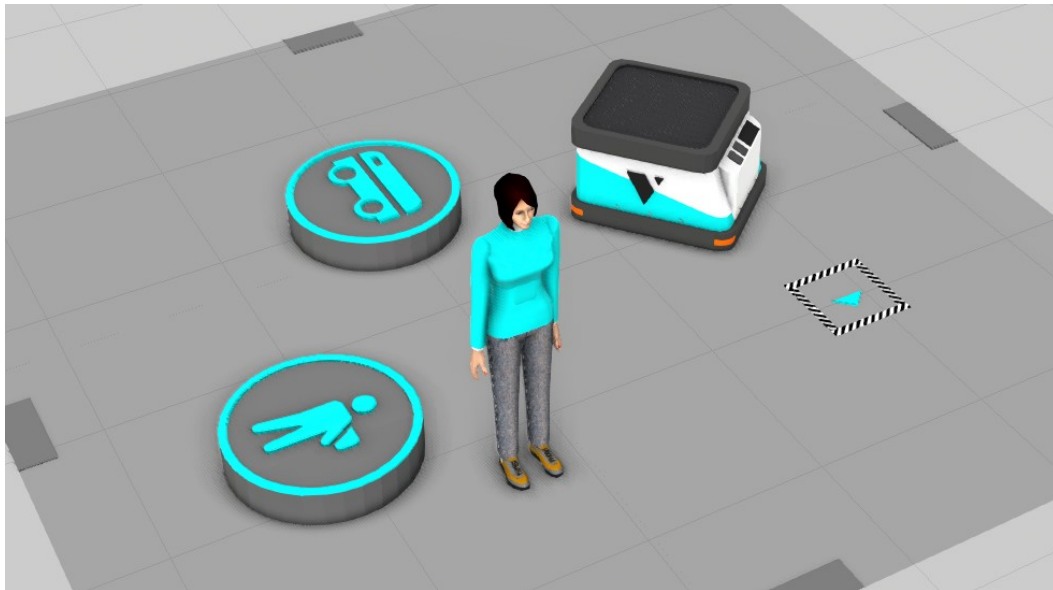

This tutorial is an introduction to features of Process Modelling Resources and Transport Controllers. This tutorial requires basic knowledge of Process Modelling with Visual Component.

This tutorial contains:

- Features overview
- Use case examples
- Resource properties

## Support

[support@visualcomponents.com](mailto:support@visualcomponents.com)

## Visual Components Forum

[forum.visualcomponents.com](http://forum.visualcomponents.com)

# Contents

General Features .....	3
Resource priority .....	3
Transport and Work priority .....	3
Multi-transporting.....	3
Tools .....	5
Approach and resource position .....	6
Idling and charging .....	7
WaitForTransport.....	8
LoadAssist and UnloadAssist.....	9
Reserving a resource to a process.....	10
Navigation .....	12
Static obstacle avoidance .....	12
Dynamic obstacle avoidance.....	12
Pathways .....	12
Generic resource properties .....	14
Default.....	14
Transport.....	14
Power .....	16
Human animations .....	17
Picking, placing, and transporting.....	17
Working .....	18

# General Features

## Resource priority

Available resources are prioritized for transport and work tasks according to "ResourcePriority" property in the Transport Controller.

Priorities

**Nearest:** Available resource nearest to the collecting (pick) or work location is allocated for the task

**Least Utilized:** Available resource that is least utilized (Statistics.Utilization) is allocated for the task

**None:** Arbitrary priority

## Transport and Work priority

A "Priority" property in a transport link determines the priority of transportation via the corresponding link among all active transportation tasks. Similarly, all work tasks are prioritized according to "Work::Priority" property in the Transport Controller. Transport and work tasks share the same priority system.

Link priority is applied to collecting. See section "Generic resource properties" and under "Transport" for reversing delivery order.

The priority is a number. The lower the value, the higher the priority, e.g. 1 = high priority and 100 = low priority. Tasks with equal priorities are dealt with FIFO principle.


**Note:** The priority is applied only to the active transport/work tasks. This means that it does not affect the transportation pairing between the processes. In other terms, processes do not have priority, only the transportation/work that the processes send/publish to the transport system.

## Multi-transporting


Resources can collect and deliver multiple products simultaneously between processes that have active transports (matching TransportIn and TransportOut statements).

Resources have a property "Transport::Capacity" which defines the maximum amount of products that can be on-board at a time. Resources collect all products first then deliver. A strategy defined by a "Strategy" property in Transport Controller is followed when multi-transporting. The selected strategy is applied to all resources connected to the Transport Controller.


## Strategies

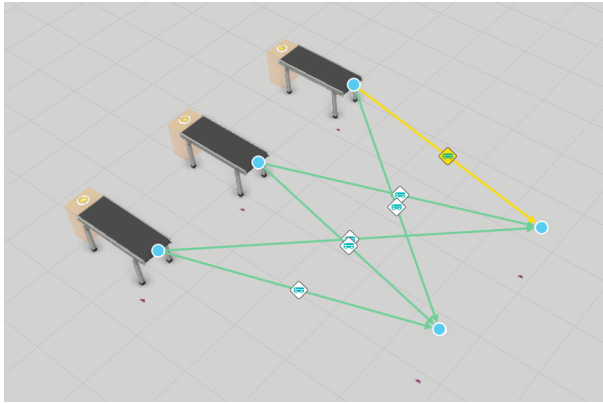


**One-to-One:** Collecting and delivering is carried only between two processes at a time

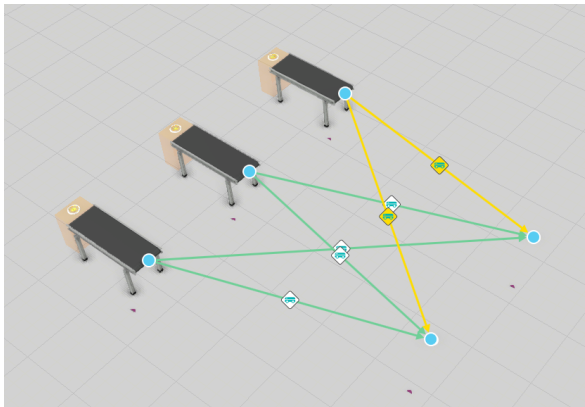

**One-To-Many:** Collect all from one process and deliver to any number of processes at a time

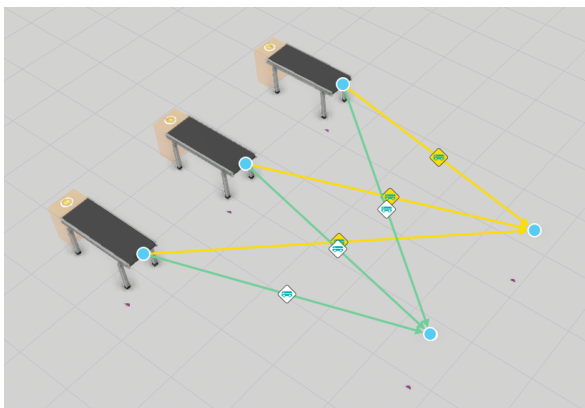

**Many-To-One:** Collect from any number of processes and deliver to one

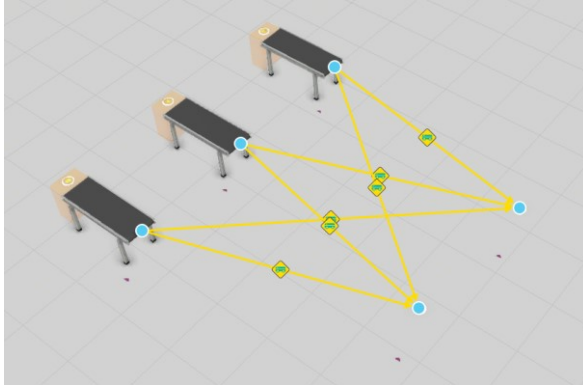

**Many-To-Many:** Collect from any number of processes and deliver to any number of processes

### Collecting and delivering

A resource can receive new collect tasks until its capacity is consumed or it initiates delivery. After delivery is initiated, new collect tasks are not accepted until all deliveries of the collected products are completed.

Delivering of the collected products is carried in the order defined by a property "Transport::LIFO" in the resource. If LIFO is enabled, the products are delivered in reverse order to which they were collected.

**Note:** Multi-transporting is *greedy*, which means that a resource will be dispatched to handle as many transportation (collect and delivery) tasks as possible when multiple transportations that meet the strategy are available.

### Tools

In each transport link, a Tool that will be used to transport the product(s) can be defined. Work tasks have a Tool definition in the transport controller "Work::Tool" property. The options are:

**Use Current:** Keep existing tool (if any used in the previous task)

**Tool Name:** Define the tool by its (component) name. The name does not need to be complete. A part of the name is sufficient and is used as a lookup name. In search, (\*) wildcards are added in front and end of the name. For example, if there are two tools available with names *MyTool #1* and *MyTool #2* tool name can be *MyTool* in order to accept either one.

**Product Property** (not available in Work): The Tool Name can be read from the given product property (string). The name lookup is the same as in **Tool Name** option.

**No Tool:** No tool is allowed. If the resource has any existing tool, those must be returned first.

Most Transport Controllers require the available tools to be connected through *Tools* interface. An error is printed to the output and simulation is paused, if the tool is not found.


In case the defined tool is found but is reserved to another resource the task is kept in a priority queue until the tool is available. If other tasks are available that do not require the tool the resource will be dispatched to that task instead (skipping tasks with a higher priority).

## Approach and resource position

A ResourcePosition is defined in each TransportIn, TransportOut and Work statement. The ResourcePosition is the final target where the resource stops and picks/places the products from/to the process.



The ResourcePosition's location can be translated with the "ResourcePickOffset" and "ResourcePlaceOffset" properties in a transport link by enabling "UseCustomParameters" or by defining the default values in the Transport Controller "LinkDefaults" property tab. The defaults are applied to all links that do not use custom settings.

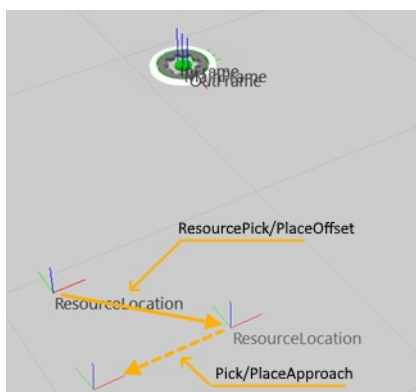

A via point, known as approach position, can be defined similarly to ResourcePosition in each link and in the defaults tab of the Transport Controller. The approach position is applied as a translation relative to the ResourcePosition (final target).

If the approach is defined, it will be used also as a via point when leaving the process.

## Idling and charging

Idle and charging locations are defined by placing idle or charging location components around the layout and must be connected to the Transport Controller through "Idle/ChargingLocations" interface.

Resources proceed to the nearest idle location after being standby (without tasks) for a duration defined in "TimeToIdle" property in each resource. If the time is set to zero, idling is disabled.

The allowed number of resources at a single idle location is defined in "Capacity" property in the idle location. Only one resource can occupy a charging location at a time.

Idle locations can be used for charging if "Charger" property is enabled.

Charging locations are dedicated to charging only unless "AllowIdling" property in the location is enabled. If "AllowIdling" is enabled, the charging location is used as an idle location with "Charger" enabled.


A resource will seek the nearest charging location after its "Power::AvailableCapacity" (read-only) falls below the set threshold "Power::ToChargeLimit". The resource does not immediately proceed to charge if it has active transport tasks. In that case, it will finish the tasks and then proceed to charge. In case the resource is reserved for a process, it can only proceed to charge once released.

At the charging, the resource will be occupied until its available capacity has reached "Power::ChargeUntilLimit". If no new tasks are available after charged above the limit, the resource will stay and continue charging until it has reached maximum charge. When at maximum and "AllowIdling" is not enabled, the resource leaves the charging location and proceeds to the nearest idle location to wait for new tasks.

## WaitForTransport

A "WaitForTransport" property in a transport link can be used to hold the product on-board/in hand until the receiving process starts to execute a Wait Transport statement. If the Wait Transport statement is already being executed once the resource arrives at the process, the resource will place the product into the process immediately. Otherwise, the resource will wait at the designated ResourcePosition.

This way, it is possible to request a resource to bring and wait with a product next to the process. A usage example is shown in the picture below. In the example, a request for *Product #1* is made, and immediately after, another product (*Product #2*) is waited to arrive from another link. After receiving *Product #2*, a Work is carried on that product to prepare it. After the work is finished, a resource possibly waiting with *Product #1* is allowed to place it into the process. Finally, the products are attached and shipped out as one.

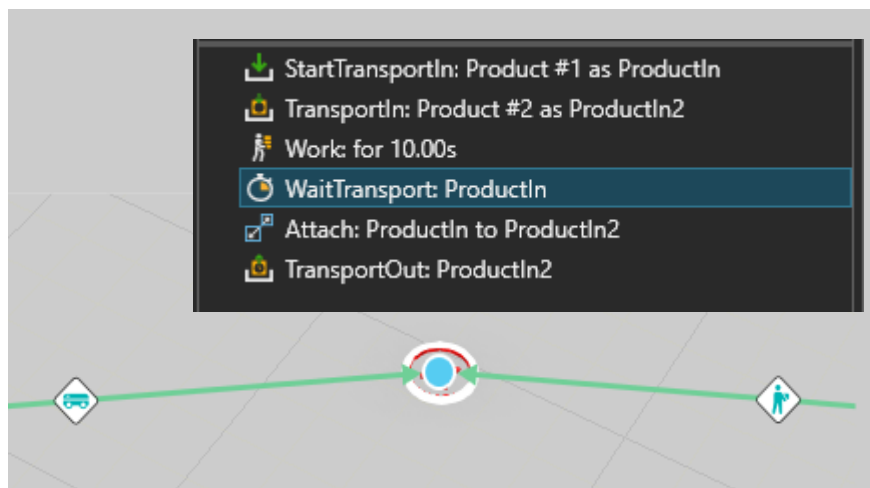




## LoadAssist and UnloadAssist

Another resource can load and unload products to the primary resource used for transportation. The used assistant is determined by the transport controller assigned to the transport link's property "LoadAssistant" or "UnloadAssistant". The property has a Null default value. Null is unassisted.

The primary resource will travel to the "ResourceLocation" specified in the corresponding process, and the assistant will be located between the ResourceLocation and the product unless the process is accompanied by the "AssistLocation" frame that will be used instead.

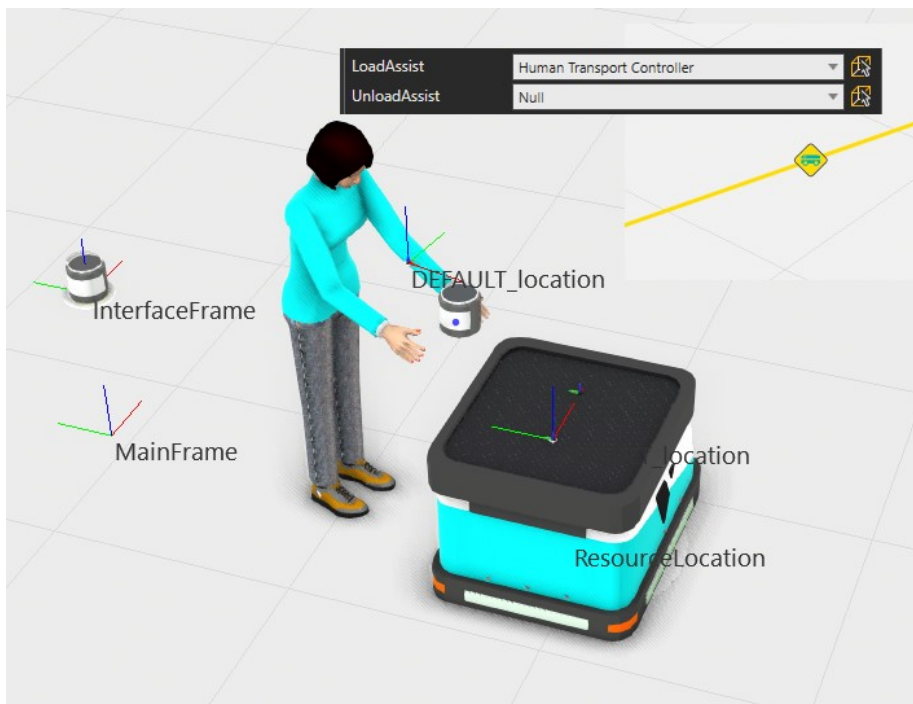


The request for assistance will be sent immediately upon departure to the loading or unloading location. The assistant will be waiting with the picked product in case the assistance is ready before the primary resource and vice versa.

**Note:** In case the assistant is attached to the primary resource, e.g., a robot arm on a robot controller is on-board, the request for assistance is sent after the primary resource is ready at the loading or unloading location and not upon departure like usually.



## Reserving a resource to a process

If a resource must be dedicated to a process, it is possible to send a ReserveResource signal with Send Signal statement to the corresponding Transport Controller from a process.

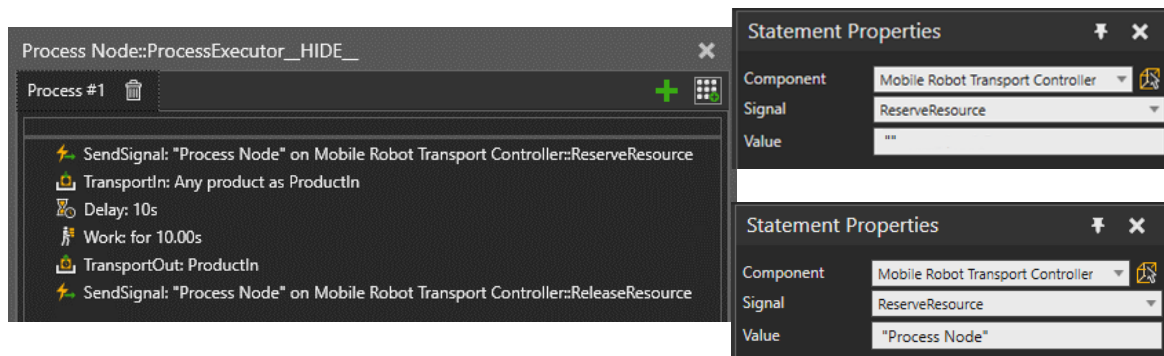


Once a Transport Controller receives the ReserveResource signal, it will reserve the next resource dispatched to transport products from/to or carry out work at the process. The value of the signal defines the process. If the value is an **empty string** (""), the caller process is used; otherwise, it must be the process **component's name** to which the reservation will be made.

When a resource is reserved for a process, no other resource (in the same controller) can be dispatched to it. The reserved resource will be dedicated to handle transport in/out and work tasks at the process until it is released or reserved by another process.

A resource can be reserved for multiple processes simultaneously. Therefore, ReleaseResource must be called at any point (after reserving) within the same process routine to release the process for other resources.

A typical example case is to reserve a mobile robot to wait for the next transport out after bringing products into a process. Another case is to have an operator dedicated to a sequence of tasks in a work cell so that any other operator cannot intervene.

In the picture below, the operators are working on “their own” side indicated by the red dashed line. ReserveResource and ReleaseResource are called in both the “Manual Workstation” and the “CMM” process on each side.

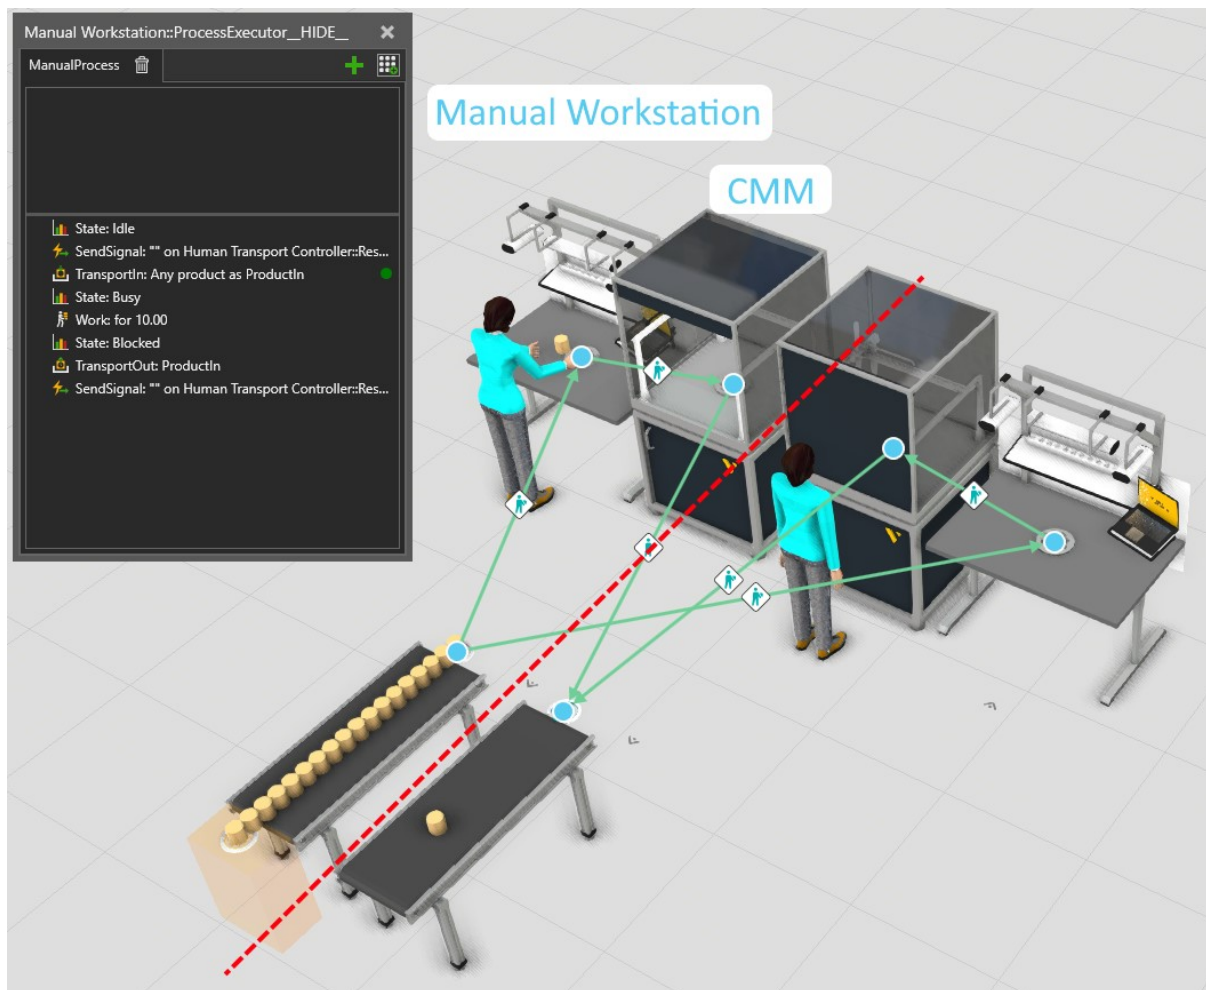

# Navigation

## Static obstacle avoidance

Once the simulation starts, a navigation mesh is generated. The navigation mesh will be marked with static obstacles that were detected during the mesh generation. The mesh is based on pathways, and if no pathways are connected to the Transport Controller, an invisible "global area" that covers the World floor can be used in order to detect and avoid static obstacles. This option can be toggled on or off from the "UseGlobalArea" property in the Transport Controller. Without the option, static obstacles are ignored.

A horizontal and vertical safety clearance will be added around the detected obstacles. The horizontal clearance is defined as the highest horizontal radius of connected resources plus the "ObstacleHorizontalClearance" value defined in the Transport Controller. The vertical clearance is the tallest resource plus the "ObstacleVerticalClearance".

Obstacles (e.g., light curtains) can be excluded by adding the components to "ExcludeObstacles" component list. **Note:** A pathway has also a property for excluding all obstacles in that area.

By default, obstacles are detected based on their component bound box data. Some obstacles may be such a shape that the resource can go under it on some parts (a gate, for instance). In such a case, the obstacle can be added to "PrecisionObstacles" list. The geometries of a PrecisionObstacle are examined in more detail, which takes more time to process.

## Dynamic obstacle avoidance

Dynamic avoidance can be enabled with "DynamicAvoidance" property in a Transport Controller. Dynamic avoidance is a global functionality in a layout. Enabling the avoidance will make all connected resources visible to other controllers and thus avoidable. If avoidance is disabled, the resources will not avoid each other and are ignored by other controllers.

## Pathways


Pathways can be used to restrict access, limit capacity and speed on the respective pathway. A pathway must be connected to the Transport Controller to let the connected resources use and follow the pathways.

If no pathways are connected to the Transport Controller, an invisible "global area" covering the World floor and has no limits is generated if "UseGlobalArea" property in the Transport Controller is checked.


Obstacle detection can be turned on and off for each area with the "DetectObstacles" property.

Pathways are automatically connected if they are close enough to each other. Pathways can overlap but cannot be too far from each other. Connections are made from the corner points or centerline of the pathways. One-way paths are always connected from the start

and endpoints of the centerline along the defined direction. Non-directed pathway connection points are controlled with "CenterlineConnect" property. See the image below.

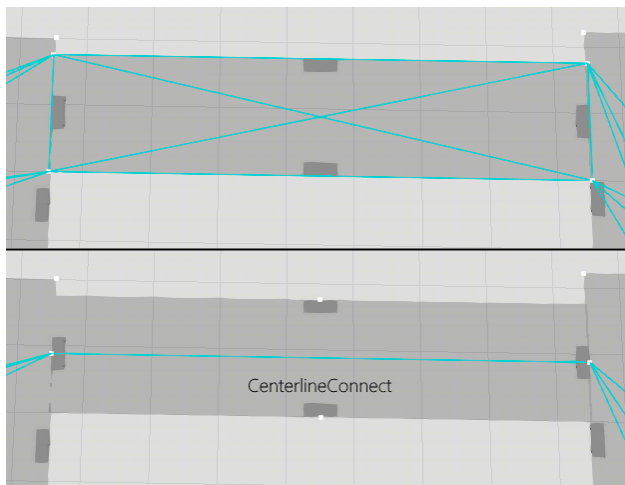

Resources can be limited to move only in one direction along the path if "OneWay" property is enabled. With this option, it is possible to gain more control and construct lanes. When a junction of multiple lines is required, it is recommended to use a non-directional pathway area between, as shown in the figure below.

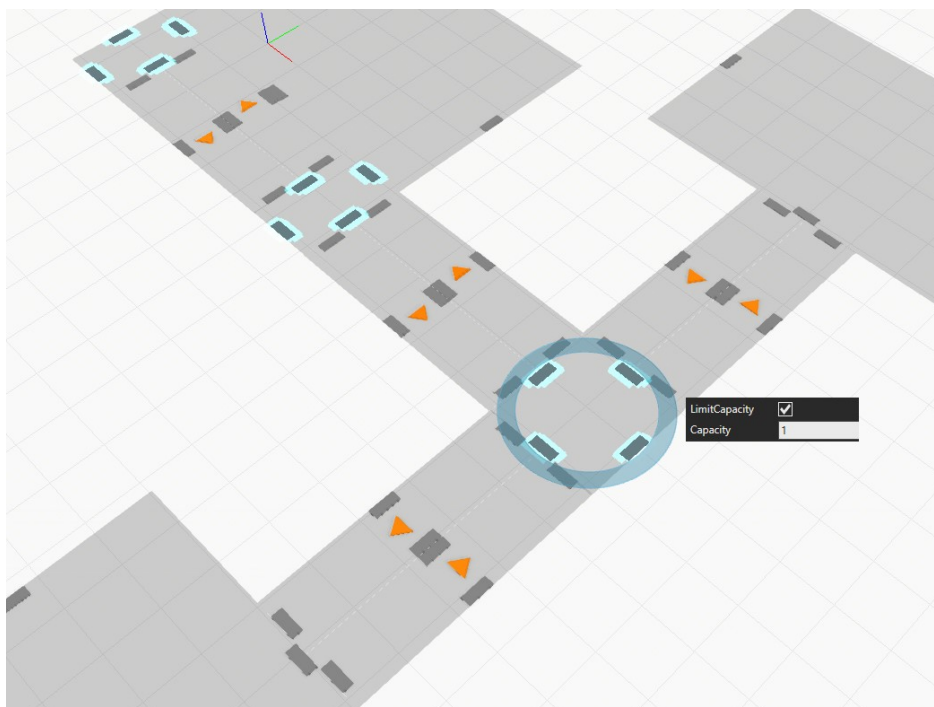

The capacity of the highlighted junctions can be limited to one in order to avoid collisions.

# Generic resource properties

Humans, mobile robots, and forklifts share the same properties described in this section.

## Default

TurnSpeed	30	°/s
MoveSpeed	1500	mm/s
MoveSpeedLoaded	1000	mm/s
MoveSpeedAppr...	300	mm/s
MoveSpeedAvoid...	500	mm/s
TimeToIdle	10	s
Available	<input checked="" type="checkbox"/>	
TravelDistance	0	m

**Simulation level:** Change to "Fast" in order to improve performance and skip some visualization details (does not affect the simulation results)

**Tip:** Set globally to all resources under the simulation controls.

**TurnSpeed:** Specifies the maximum angular velocity when rotating in place

**MoveSpeed:** Specifies the maximum velocity without payload

**MoveSpeedLoaded:** Specifies the maximum velocity with a payload

**MoveSpeedApproach:** Specifies the velocity used when approaching a resource position and reversing out

**MoveSpeedAvoidance:** Specifies the velocity used when other resources are nearby

**TimeToIdle:** See section "Idling and Charging"

**Available:** Can be used during simulation to send the resource to a break. Once set to False, block any new tasks but complete existing tasks before changing to Break state. Continues to accept new tasks after set to True

**TravelDistance:** Total distance traveled during the simulation

## Transport

The transport tab defines the order of delivery (LIFO/FIFO), how many products can be carried simultaneously, where the products are placed on the resource, and how they are handled.

Default	Transport	Power
LIFO	<input checked="" type="checkbox"/>	
Capacity	2	
ProductType	Default <Any>	
ShowLocation	<input checked="" type="checkbox"/>	
TransportLocation	Tx -200 Ty 0 Tz 640 Rx 0 Ry 0 Rz 0	
	Update From Product	
	Delete Location	
KeepOrientation	<input checked="" type="checkbox"/>	
Pattern	X 2 Y 1 Z 1	
PatternStep	X 300 Y 0 Z 0	
	Delete All Locations	

The highlighted properties are applied globally to all products. Other properties are applied to each product type that is handled.

Global properties

**LIFO:** If enabled, the product last collected is delivered to its destination first.

**Capacity:** Total capacity of products on-board simultaneously

Product type-specific properties:

**Product Type:** A drop-down menu for selecting the product type for which the location and pattern are applied. The "Default <Any>" is applied to all product types that have no specific location defined. Select the last item "Add New...." on the menu to define a new location for a specific product type.

**ShowLocation:** Displays the location and pattern in the 3D World

**TransportLocation:** An offset from the resource component origin used as the first position and reference for the pattern. Any change in the fields is saved immediately to the location.

**Update From Product:** Click to read and write the position of a product on-board (when the simulation is paused) to the **TransportLocation** field. If "Default <Any>" is selected, the first product on-board is selected regardless of its type. Otherwise, the targeted product type is selected.

**KeepOrientation:** If enabled, only a translation of the product to the corresponding location is applied when collecting (pick) and delivering (place). In other words, the orientation of the **TransportLocation** and the receiving process' ProductPosition is ignored.


**Pattern:** Number of products along each axis defined by the TransportLocation

**PatternStep:** Distance between the products along each axis

Add new location

It is possible to type in the name of a product type (defined in Process tab/Products) to **ProductType** manually and then click **Add**

**Location** to create a new location with a zero offset.

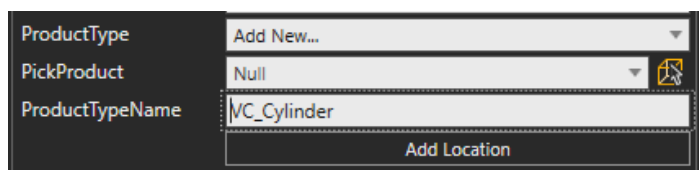

Alternatively, the simulation can be run until the desired product is on-board, pause, and pick the product with **PickProduct** that will read its type and location. Then click **Add Location**. If a location for the same product type already exists, it will not be overwritten. Instead, that product type will be selected as the **ProductType**.



## Power

The power tab is available for mobile robots and forklifts.

**Enabled:** Set to False in order to ignore power status.

**Capacity:** The total capacity e.g. Ah

**InitialCapacity:** Available capacity at the beginning of the simulation

**BusyConsumption\_h:** Defines the number of units per hour that the resource consumes when Busy e.g. amperes.

Default	Transport	Power
Enabled	<input checked="" type="checkbox"/>	
Capacity	100	
InitialCapacity	80.000 <span>+</span>	
BusyConsumption_h	100	
IdleConsumption_h	10	
ReChargeRate_h	100	
ToChargeLimit	20 %	
ChargeUntilLimit	80 %	
CurrentCapacity	77.98	

**IdleConsumption\_h:** Defines the number of units per hour that the resource consumes when Idle (standby) e.g. amperes.

**ReChargeRate\_h:** Charging rate as units per hour.

**ToChargeLimit:** Percentage of the total Capacity below which charging is required. Charging is initiated after existing tasks are completed. If no charging locations are available in the World, charging will be done in-place. See also section "Idling and Charging"


**ChargeUntilLimit:** Percentage of the total Capacity below which leaving charging is not permitted. When the charge has reached this value, new tasks can be accepted. See also section "Idling and Charging".

**CurrentCapacity:** Indicates the available capacity.



# Human animations

The Human resource has default animations defined for walking with or without a product or a tool. The same applies to stand, picking, placing, and working. Animations are defined as robot program routines, and the defaults are used if no custom animations are found for the specific action.

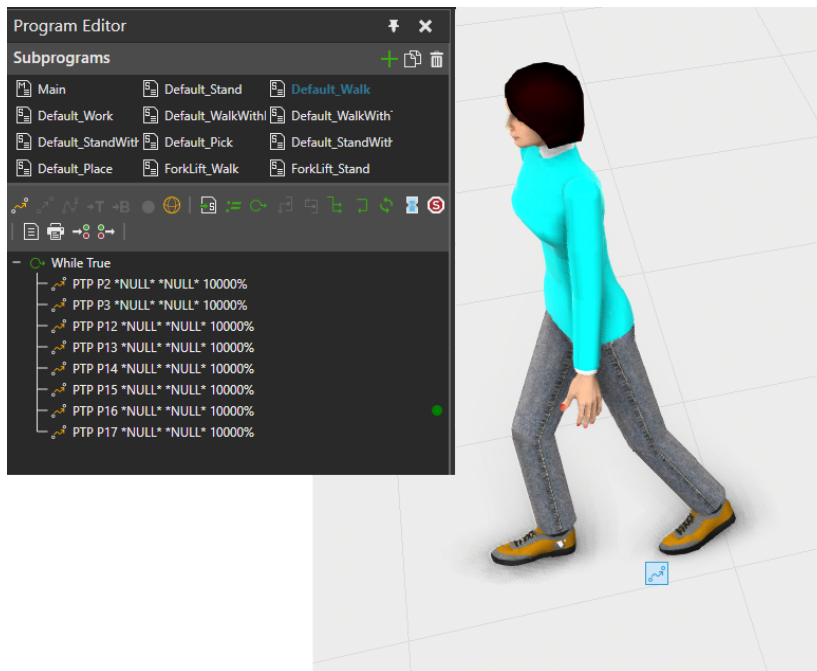


Custom animations can be created with a naming convention. The naming can be based on the carried product's product type, the tool component name, or the process name, depending on the active action.

## Picking, placing, and transporting

*Without a tool*, picking, placing, and carrying can be animated based on the product type name. The following four routines are used:

- <product type name>\_Pick
- <product type name>\_Place
- <product type name>\_Walk
- <product type name>\_Stand

Where <product type name> is the required prefix. E.g., animation for a specific product type "Special Can" must be named with a prefix "Special Box": "Special Box\_Pick", "Special Box\_Place" etc.

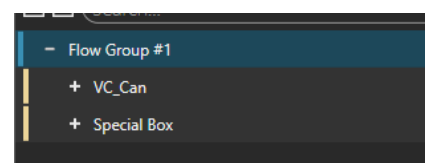

**Note:** If multiple products are on-board, only the first product picked is considered when the walk and stand animations are selected.

*With a tool*, the product type name is ignored. The used tool's component name is used to define the animation. Pick and Place animations are not used with a tool.

- <tool name>\_Walk
- <tool name>\_Stand

In case multiple tools for the same task are available, the tool name can be given partially as a lookup name. For example, multiple pallet jacks can be available, but each component must have a unique name: "Pallet Jack #1", "Pallet Jack #2" etc. Then the animation prefix can be the common part of the names. In this case, leaving out the running number: "Pallet Jack\_Walk".

**Note:** Animations are not time-scaled. If the duration of animation is longer than *PickTime*, *PlaceTime*, or *ProcessTime* (working), then it will be cut once the time is exceeded.

**Tip:** It is recommended to copy the default routines such as the Default\_Walk and use touch up to update the upper body positions to each statement.

## Working

*Without a tool*, work animation can be based on the process name where the work is being carried. The prefix is the name of the process:

- <process name>\_Work

For example: "Process #1\_Work".

**With a tool**, the process name is ignored, and the tool component's name is used instead:

- <tool name>\_Work

For example: "Power Drill\_Work".

